

CONCORD



CSW4WH20B4K-A

4-Way HDMI Switcher

Manual Switching

 
Box Contents:

1 x 4-Way HDMI Switcher


1 x Infrared Remote Control

1 x Mains Power Adaptor


Product Diagram:

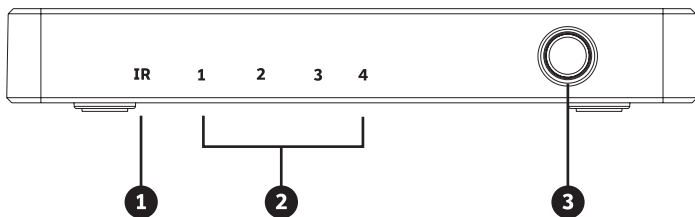

#	Feature	Description
1	Infrared	Infrared receiver window.
2	Input LED	The LED will illuminate to chosen HDMI Input.
3	Select Button	This allows users to select HDMI input ports.

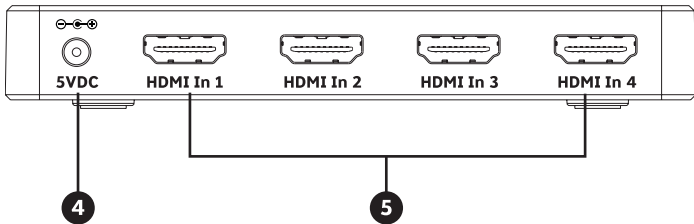 


#	Feature	Description
4	DC 5V	Connect 5V/1A adaptor to AC wall outlet for power supply.
5	HDMI Inputs	Connect to HDMI source devices such as Blu-ray, DVD or Gaming Console.

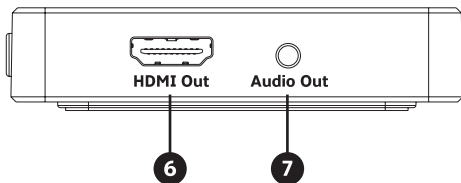 

#	Feature	Description
6	Audio Out	Connect to audio amplifier or TV L/R audio input port.
7	HDMI Output	Connect to HDMI display device such as TV/Projector.

 Connection Diagram:

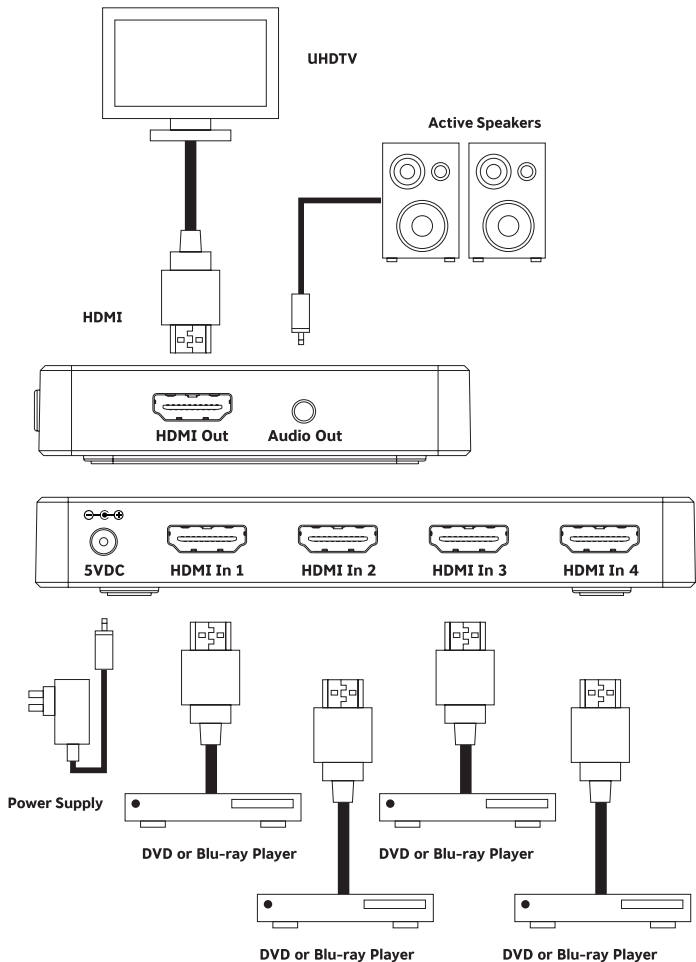

Operation:

1. Connect the DC plug of the mains power adaptor to the power socket of the switcher. Plug in the mains power adaptor to a 240VAC wall socket and turn it on.
2. Connect a HDMI cable (not included) from your device such as Pay TV, DVD players or media players to the HDMI input of the switcher.
3. Connect HDMI cables (not included) from the four HDMI outputs of the switcher to four HDMI inputs.

Troubleshooting:

Problem	Solution
No Video Output	Check to see if your source device and TV's/monitors are all switched on.
	Check to see if the mains power adaptor is connected properly and switched on.
	Check to see your source device and monitors/TV's resolution and frequency matches the supported resolution of the HDMI splitter.
	Check to see if your HDMI cables are faulty.
	Reconnect all the HDMI cables on the inputs and outputs.

Safety:

- Do not open or repair the device without professional assistance to avoid electrical shock.
- Do not expose this unit to water, moisture or any liquid.
- Position the unit in a well ventilated area to prevent the unit from overheating.
- Only use the supplied 5VDC, 1A power adaptor. If you use any third party power supplies, ensure the voltage is the same to prevent the unit from damage.

Features:

- 1 x HDMI 4x1 Switcher unit
- 1 x 5V/1A Mains Power Adaptor
- 1 x Remote Control unit
- 1 x User Manual



WARNING! KEEP BUTTON BATTERIES OUT OF REACH OF CHILDREN

- If swallowed a lithium button battery may lead to serious or fatal injury in as little as 2 hours, due to chemical burns and potential perforation of the oesophagus.
- Non-lithium button batteries battery can cause serious injuries if it is swallowed or placed inside any part of the body.
- All button batteries must be kept away from children regardless if they are new or used.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 (Australia) or 0800 764 766 (New Zealand) for fast, expert advice.
- If your child is having difficulty breathing contact 000 (Australia) or 111 (New Zealand).
- Dispose of used button batteries immediately and safely out of the reach of children. A battery can still be dangerous even when it can no longer operate the device.
- As soon as you have finished using a button battery, put sticky tape around both sides of it. This will make it harder for children to swallow the button battery and avoid the risk of the battery catching fire.
- Immediately dispose of button batteries immediately out of reach of children, or recycle using a child resistant container and take used cells to your local battery collection centre.

Specifications:

Inputs:	4 x HDMI
Outputs:	1 x HDMI, 1 x 3.5mm Stereo Audio
HDMI:	2.0b
HDCP:	2.2, 1.4
HDR:	10
Resolution:	Up to 4K (3840 x 2160) @ 60/50/30Hz
Video Bandwidth:	18Gbps
Audio support:	LPCM 2/5.1/7.1CH, Dolby Digital, DTS 5.1, Dolby Digital+, Dolby TrueHD, DTS-HD Master Audio, Dolby Atmos, DTS:X
Colour Depth:	10-bit
Dimensions:	121(W) x 79(D) x 16(H)mm

Distributed by:

Techbrands by Electus Distribution Pty. Ltd

320 Victoria Rd, Rydalmere

NSW 2116 Australia

Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

www.techbrands.com