



Portable UHF Microphone Headset System

User Manual

AM-4053


WARNING

1. Please don't put the product and accessories nearby fire or other hot environment.
2. Please don't put the product and accessories near water or damp places.
3. Please don't open or tear down the battery accessories. It may cause explosion danger if the battery is replaced improperly. Avoid putting the battery in water, fire or near a hot environment.
4. This product needs to use the supplied power adapter (DC5V, 500mA) to charge. Once fully charged, you should remember to unplug the power cord or power socket.
5. If you don't need to use it, hold down the power switch more than 3 seconds to power off.
6. Please turn off the product in flammable and combustible areas.
7. When you take a plane, please obey the related rules and disciplines and remember to turn off the amplifier to avoid the hidden danger.

FEATURES

1. Stylish, ergonomic and comfortable design;
2. Adopts UHF high frequency wireless PA technology, transmission distance up to 35m;
3. Adopts Hi Fi double magnetic trumpet --- powerfully treble and bass, fuller tenor;
4. Multifunction Mini USB interface; supports three functions (a. DC 5V charge port; b. used as computer speakers; c. manage documents in a SD card or USB via computer);
5. MP3 audio decoding --- support SD Card & USB disk;
6. UHF wireless microphones with intelligent power saving function.

FUNCTIONS

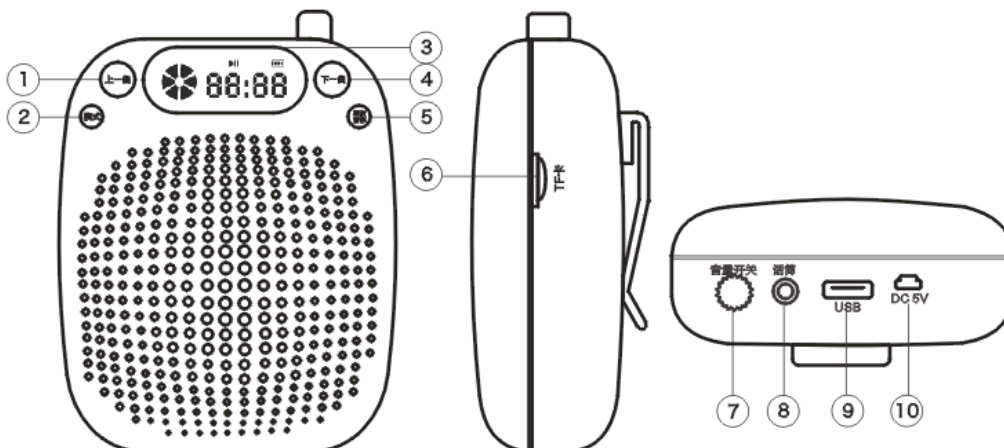

1. Last: in MP3 Mode, Short press for last song, Long press for fast back-warding;
2. Mode key: Short press to change mode; in UHF mode, long press to pair the UHF frequency point manually;
3. Digital display;
4. Next: in MP3 Mode, short press for last song, long press for fast forwarding;
5. Play/Pause;
6. TF Card slot;
7. Power switch / volume control;
8. Wired microphone (this device support wired microphone also);
9. USB interface;
10. DC 5V charger input.

OPERATION

Pair the UHF frequency point manually*

Pairing: First, turn on the amplifier and the LCD screen will display UHF mode by default. Hold down "6" key for 5 seconds, then turn on the wireless microphone and long press "volume +" key, to pair the wireless microphone. There will be a "Di" of the main device. (This operation should be used when the wireless microphone is damaged, replaced or there are more than one set UHF voice amplifier being used in a small area and to avoid mutual interference via pairing manually again.)

Please note:

- .- After pairing the wireless UHF microphone successfully, please do not hold down the "volume +" key (don't tap and hold).
- .- There is no need to pair the wireless microphone and voice amplifier manually during the first use, as they will pair with each other automatically.

SD/USB Disk

Insert the SD card/USB disk as shown on the device correctly, then press "M" key to switch to the audio (MP3) mode, then you can play the audio files in the SD card/USB disk.

Note: Hold down the "Play" key when playing music, the LCD screen will display "ONE", which means single loop. Holding down the "Play" key again, will have the LCD screen display "ALL", which means to play all.

Charging the Amplifier

The Battery symbol on the screen flashing means low power. Please use the supplied DC 5V power charger to charge. The red LED will flash when charging and Once fully charge the red LED will remain on.


Note: We suggest fully recharge the amplifier before you using it the first time.

Charge the Wireless Microphone

The wireless microphone as a low battery when the blue light is flashing. Please turn off the microphone, and use DC 5V power charger. The red LED will display when charging, once it's off the item is fully charged.

Please note:

1. Please turn off the microphone before recharging. Don't forget to unplug the charging socket power supply once full charge .
2. " he wireless microphone has an auto sleep mode if not being used for a long time (20 minutes) to prevent battery drain, you can press A volume @ 5Bkey to return from this mode.
3. If you want to increase the volume of wireless microphone, please momentarily press the "volume +" (that is press once then release, and don't hold it down all the time.)

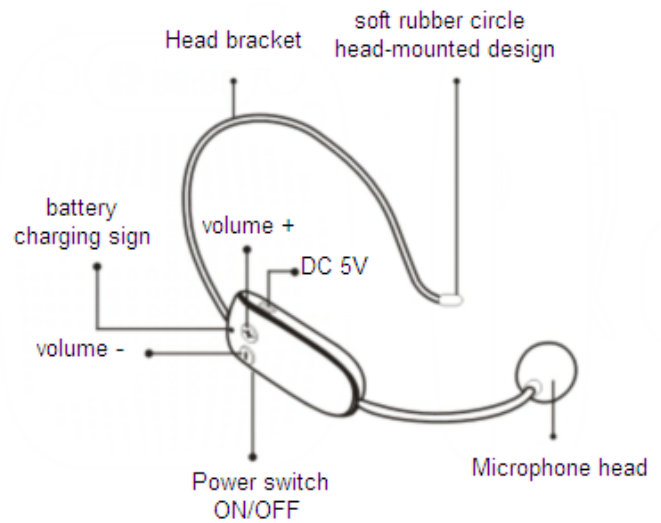

TROUBLESHOOTING

1. Turn on the power switch, but the amplifier has no sound.

- A) The LCD is not on: it means low power and you should charge the amplifier.
- B) Please confirm whether the wireless microphone has been paired with the amplifier successfully or not. Pair the UHF microphone manually again if necessary.

2. The voice amplifier has distinct howling.

- A. Wear the microphones correctly: put the microphone in front of the mouth;
- B. In a small room, please turn down the volume properly to avoid howling.

SPECIFICATIONS

Power Output:	10W	Frequency Response	90Hz-18KHz
Wireless Distance:	35m	Working Temperature:	-10°C5!&°C
Recharging Voltage:	DC5V, 500mA	Amplification-use Time:	12-18 hours
Music-use Time:	6-8 hours	Charging Time:	3-5 hours

DISTRIBUTED BY:

TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com
Made in China