

total
CONTROL

Universal
Remote Control
TV



Instruction
Manual

710493

RDN-120715

English: TOTAL CONTROL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This warranty will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover accidents, carrying cases, batteries, broken or missing cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. To obtain warranty service during the warranty period, please call us at the number mentioned on the Customer Service page. Please note that we rely on your purchase receipt so that we may establish your eligibility for service. For full details on the product and product care instructions, please refer to the user manual. We warrant this product under our warranty policy which is subject to applicable laws and regulations. This warranty does not affect those rights that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

New Zealand
0800 1425569
sales@amber.co.nz
www.amber.co.nz

Australia
1 300 888 298
ofa.support@ambertech.com.au
www.ambertech.com.au

Welcome

Congratulations on purchasing this universal TV Device remote control. You can now replace your lost or faulty remote.

Batteries



Inserting the Batteries

- 1 Remove the black plastic battery cover from the back of the remote control by gently push and slide back the battery cover to open.
- 2 Insert two AAA batteries (not supplied) into your remote control – ensure that the positive (+) and negative (-) symbols on the batteries match the symbols inside the remote control unit.
- 3 Replace the battery cover, by sliding it into place until it clicks shut.

Note: Battery use

Use only new batteries of the required size and recommended type. Do not mix old and new batteries or rechargeable batteries of different capacities.

Your TV Device remote

Note: Button use

Your universal TV Device remote will need to be programmed before use. Most of the buttons listed on the right will not be usable until it is programmed. Please set up and programme the remote as outlined on the following pages to do so. Once programmed, you can use the remote to control the relevant functions of your devices as listed on the page opposite by referring back to this section

Button use

LED indicator

SWAP, bring you back to last channel viewed
MENU button
EPG button Electronic Programming Guide & Info button
OK button

VOLUME + and - buttons

TELETEXT mode button
Fastext buttons

Brand code list

TV

Television / HDTV / LCD / LED / Plasma / Projector


TV

Alba	1667 1585 1865 1037	Audioworld	0698 0706	Blue Sky	0037 1372 1037 0714
A.R. Systems	0037 0556	Autovox	1163 1585 1667	BlueSky	1709 1149 0668 0715
Accent	0009 0037 0556	AWA	2241 0037 0698 0178		0625 1652 0624 0556
Acentic	0556		0009 0011 0556 0606		0808 1363 1916
Acer	1339	Axent	0108 0264 1681 3296	BlueDiamond	2106
Acoustic Solutions	1667 1727 1149 1523	Axon	0009	Blush	1775 1709
Adcom	0625	Axon	0714	Boca	1652
Admiral	0093 0264	Azuki	2239	Bojo	3528
Advert	1613	Baler	1372 2239	Boman	1372
AEA	0037 0556	Baird	0109 0343 0208 0606	Boots	0009
AEG	0606 1556 1372 1037	Bang & Olufsen	0620	Bork	1363
	1149 1163 1667 1585	Base	0780 0698	BPL	0037 0556
	2239 2197 2241	Basic Line	1149 1163 0037 0668	Brandt	0625 0109 0287 0335
Altron	0891	Bauer	0556 0009 1037		0343 0560 1882 1585
Agashi	0264		0009 2197 0698 0706		1667
Agia photo	2239	Bauhn	0264	Brandt Electronique	0287 0335
Agora	1585 0037	Baur	2461 3611	Brimax	1709
Aiko	0009 0037 0556 0371		0009 0535 0195 0512	Brinkmann	0037 0556 0668 0486
	0035 1681 0880 0361	Bauhin	0037 0556 0191 0361	Brionvega	0037 0556
	0191 0264	BBK	1505	Brother	0264
	0037 0556 0753 0208	Beaumarq	1523 1645	Bruno	0486
	0706 0698 0634 0606	Beko	0178	BSR	0361
	0499		0714 0035 0486 0715	Bush	2032 3005 2214 1983
Airis	0556	Belson	0037 0556 1308 0606		2241 1645 1652 1037
Aiwa	1916 1505		0808 1652 2125		1916 1667 0714 2053
Aikai	0361 0208 2197 0371	Belstar	0698 0706 2241 2032		2059 2127 0668 1585
	0037 0191 0035 0009	Bennett	3296 1667		2125 1682 0037 0556
	0753 0714 0706 0698	BerQ	1037		3175 0371 0009 0264
	0715 0556 0548 0480	Bersten	1562 1523 2214		0361 0208 0698 0706
	0264 0178 0606 1037	Beon	1413		1248 0587 1308 2239
	0473 0648 0812 1248	Berthen	0037 0556		1865 1720 0443 2007
	1727 1308 1865 1163	Bestar	0668 0556		1149 1556
	1523 1652	Beva	0037 0556		1523 0556
	0009	Black Diamond	2493		0037 0556 0486
Akashi	0037 0556		1037 0556 1163 0753		0264
Akiba	2241 0753 0037		0587		0610 0037 0556 0668
Akira	0037 0556	Black Strip	0035		1037
Akito	0037 0556	Blaupunkt	1709 2106 0195 0191		0037 0556
Akura	1770 0714 1709 1037	Blusens	0535 0170		0170
	1667 0037 0556 1645	Blue Media	1849 2241		0009 0037 0556
	0668 1585 0009 0264		1606		0037 0556
	1983 1363 2239 2059				1682

Programming your remote

Code Set up

Number buttons Operate the same as on your original remote.

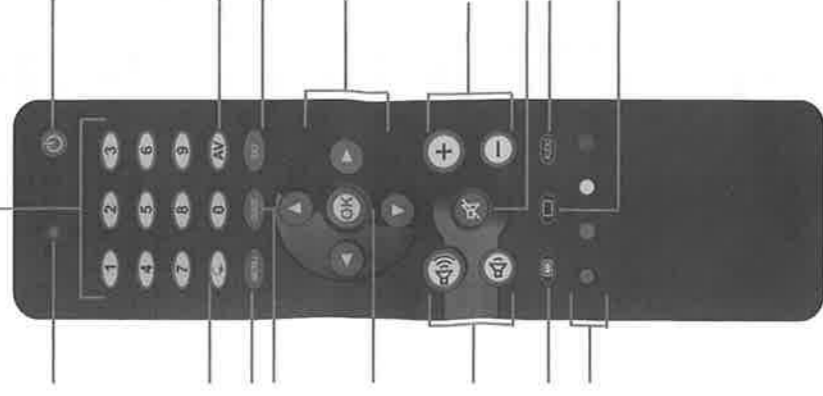

POWER button
Turns the device on and off.

AV button
Switches over to the AV channel

EXIT

UP / DOWN / LEFT / RIGHT buttons
Used for navigating menus

CHANNEL + and - buttons

MUTE button
Language Selection

TELETEXT Off button

Code Search

1. Find the **four-digit device code for your device** (e.g. **ACCENT television**) in the **Code list** in the manual. Codes are listed by device type and brand name. The most popular code is listed first. If your brand is not listed at all please try the Code Search. Make sure your equipment is switched on, if not switch it on manually.

1. Switch on your television (not on standby) and aim your **remote control** at your TV.

2. Press and hold the **red & blue keys for 3 seconds**. The red LED will light up twice.

2. Press and hold the **red & blue keys for 3 seconds**. The red LED will light up twice.

3. Press and hold the **red & blue keys for 3 seconds**. The red LED will light up twice.

3. Aim the **remote control** at your device. Press and hold the "POWER KEY until your device switches OFF (this may take up to 8 minutes). Release the "POWER key" as soon as your device switches OFF.

4. Now, **aim the remote control at your device and press POWER**. If your device switches off, the **remote control** is ready to operate your device. If it does not switch off your device simply try the next code listed for your brand.

If none of the codes listed for your brand work please try to **Code Search**. The Code Search may also work if your brand is not listed at all.

Cathay	0037 1727 0556	D-Box	0037	Emerson	0714 0178 0037 0556	Force	1149	GoldStar	0037 0009 0178 0556
CCE	0037 0556	Daewoo	0634 1849 2125 0661	Emerson	0371 0361 0624 0486	Formanti	0037 0556 0486		0361 0109 0606 0714
Celcus	1163 1149 1667 1585	Daewoo	0499 0037 0624 0556	emotion	0668	Fortress	0093	Goodmans	0715
cello	0037 1037	Dai	0009 0037 0556	Emerson	0865 1709 2106	Fraba	0037 0556		1585 2393 1667 1645
Centrex	1770	DL	0891 0780 0037 0587	Erzer	0753	Freesat	1636		1523 2214 0634 1720
	0780 0891 1536 0698	DMITECH	1163 1849 2001	Ersson	1682	Friac	0009 0037 0556 0499		1682 2053 0808 2127
Centrum	1037	DNS	0891 0780 0037 0587	Ersson	0037 0556		0610		0037 1727 0499 1709
Centurion	0037 0556	Domec	1163 1849 2001	Essentials	2486		0264 0009		1983 0624 0556 0714
CGE	0074	DSE	0668 0037 1037	Etron	0037 0556 0009	Fuchsware	0780		0668 1163 0264 0009
Changhong	3296	Dual	0698 0888 1556 0706	Eurofeel	0264	Fujicom	1626 1709		0371 0343 0035 0480
Chimei	1666	DTS	1682 2241 2032 3296	EuroLine	0037	Fujimaro	0865		0560 0335 0661 0880
Cimline	0009	Dual	0009	Europa	0264 0037 0556	Fujitsu	0009 0037 0556 0361		1308 0587 1149 1037
Cinex	0648 1556	Dux	0943 0037 0556 1137	Europa	0037 0556	Fujitsu General	0009		1916
City	0009	D-Vision	1149 0037 2032 2241	Europhon	0037 0556	Fujitsu Siemens	1666 1298 1248 1163		1585 1667
Clarity	1720	DVX	1372 1163 1667 1585	Eurovision	1163 1149		0808		0753
Clarity	0037 0556	Dynatron	0714 2197	Evesham	1248 1667 1606 1536	Funai	1817 1394 1666 1037		0653 0170 0037 0556
Clartivox	0037 0556	Dux	0037 0556 1652 1037	Excel	0037 0556		0668 0264 1505 0714		0556 1163 1585 1149
Clatronic	0037 0371 0714 0264	D-Vision	0037 0556	Excello	1037		0264 0698		1667
	0556 0009 0648 0606	D-Vision	0037 2197 2239 0556	Exquisit	0037 0556		0037 0556		0648 2197
	1372 1163	DVX	0891	Exquisit	0037 0556		1037 0037		0037 0556 0226 0108
Clayton	1037	Dynatron	0037 0556	Family Life	0037 0556		0037 0556 0361		0208 0473 0335 0560
CMX	3296	Dyon	0037 0556	Fenner	0009 1667 1163		0037 0556		0343 0548
Cobolt	0891	E.S.C.	3312 2241	Ferguson	0625 1882 0335 1037		0009		1652 0037 0556 0009
Concorde	0009	emax	0037 0556		0287 0109 0560 0343		0556		0610 0714 0715 0668
Condor	0037 0556 0009 0264	Easy Living	1248 1709 1613 1308		2393 0037 0556 0035		0009		1037 0865 0880 2125
Conia	0754 1645 2032 1702	Easy Touch	2005 2007 1556 1666		0653 0108 0361 0548		0009		0508 1223 3296 0195
	1523	Eco	2059		0443 2007 1916 2053		0343 0178 0560 0287		2059 2125 2127 2239
Conrac	0808	ECC	0706 0698		1865 3005 2106		0361 0037 0556		1582 0443 0191 0535
Conrad	0037 0556	ECG	2197 2239 2125 0037		0512 0037 0556 0371		0009		1037 0037 2007 0706
Contec	0009 0011 0264 0037	Elbe	1037		0264 0361		0109 0287		0556 0587 0009 1916
	0556	Electron	2241 3296		0208 0548 0361 0287		0343 0287		1308 0178 0343 1667
Continental Edison	0109 2241 0287	Electron	0037 0556		0343		0009		2053 1372 1645 1523
Cosmel	0009 0037 0556	Elekta	1149 1667 3175 1163		0037 0556 0714 1585		0009 0037 0556		1163 1523 3528
CPTec	0625 1363	Elektron	0037 0556 0668		1667 0715 0480 1556		0037 0556 0009		2037 3611
Crosley	0074	Eflunk	0009 0037 0556 0264		0473 0606 0808 1248		0865 1606 1298 0880		0808 2001
Crown	0009 0712 0486 0037	ELG	1208 1037		1163 3175		0808		0706
	0556 0714 0606 0715	Elin	0037 0556		0037 0556 0668 0714		1681 1363		0698 0264 0706 2214
	0208 0653 1037 1652	Elite	0037 0556 0548 0361		0624 0009 0208 0361		0009		2241
	0668	Elite	0009		1037 0808 1363 1163		0343 0287		0264
Curtis Mathes	0093	Ella	0037 0556		1308		0109 0287		0264
CWR-Tech	1372	Flint	0009 0264		0208 0361		0343 0287		0264
Cyberpix	1667	Foehn & Hirsch	0009 0264		0037 0556 0610 0264		0009		1613
Cytronix	1298		0880		0178 1840		0668		1613 2214

Murphy	2005 1849 0443 2007	Novak	0037 0556	Otto Versand	1505 0093 0512 0037	Polaroid	1645 1523 1720 1667	Quelle	0037 1505 0011 0109	Saba	0625 0109 0560 0343
Musikland	3175 1667 1149 1163	Novatronic	0037 0556		0556 0535 0195 0191		3296 2125		0512 0535 0191 0361		0287 0361 0335 0548
Mx Onida	0037 0556	Novex	1523		0361 0109 0226 0009	Policom	0109 0361 0074 0535		0074 0668 0556 0195		0650 0714 1588 1882
Mx Orca	1983 1645	Novita	1585		0343	Poppy	0009		0264 1037 0009	Saga	1585 3175
MyCom	0178	Nurnberg	0361		0037 1916 0556 1137	Portland	0624		0109 0037 0556 0287	Saga	2197
Myriad	0556 0037	Nu-Tec	0698 0037 0556 0706		0714 1037 0443 1372	Powerpoint	0037 0556 0698 0706		0037 0556	Sagem	0610 0618
Mystery	3296		0264		2007		1770		0037 0556	Saisho	0634 0009 0011 0264
NAD	0178 0865 0361	O.K.Line	1037 1372 1556		0037 0714 1137 0191	Pragma Digital	0808		0714	Saiwod	0668 0712 1037 1667
Naiiko	0037 0606 0556	Oceanic	0361 0208 0473 0548		1505 0556	Prandoni-Prince	0361		0037 0556 0178		0668 0712 1037 1667
Nakamura	0037 0556		0480 2001		0698 2461 0264 0037	Premier	0009 0264 0891		0009 0037 0556 0648		1149
National	0226	Odeon	0264		0706 0556 1681	Prima	0009 0264		0668 0264 1037		0361 0548 0208 0480
National	0226	Odys	2239 2241		1585	PrimeView	1606		0753		1556 2125 2197 2001
NEC	0170 2461 0587 1775	OK	2239		0009 0264 0037 0556	Princess	0698		0625 0093 0560 0335		0335
	0009 0037 0556 0011	Okano	0037 0556 0264 0009		1636 0650 1650 0226	Prinston	1037		0343 0753		2051 0812 2094 0618
	0499 0653 0661	OKI	1667 1585 2125 1308		0361 0037 0556 0548	Prinz	0361		0178		0587 0556 1630 1249
Neckermann	0037 0191 1505 0556		1037		0108	Pro Vision	0499 0037 0556 1037		0037 0556		1312 2137 1235 0009
NEI	0512	Olexia	1588		0037 0556		0714 1372		0037 0556		0037 1584 0264 0178
NEO	0037 0556 0371 1037	Omega	0264		0037 0556	Profex	0009 0361		2032		2197
NEO	0754 1372	Omi	0780 0891 0698 0706		0292	Profil	0009		0037 1556 0556		0037 1682 1709 0706
Neovia	0753 1770	Omi	1667		0109	Profilo	1556		0361 0548		0556 0371 0888 0753
Netsat	0885	Orimax	0714		0009	Profitronic	0037 0556		0037 0556 1037 0668		0698 0264 0714 1248
Netsat	0037 0556	Orix	0698 0706		3175	ProLine	1613 0634 1727 1037		0865 1298 1585 1645		1681 1556
Neufunk	0037 0009 0556 0610	Orn	1709 1556 1149 2125		0037 0556		0625 0037 0556 2393		0714 0624 0634 2197		0009
	0714		0556 1667 1770		0074 0037 0556	Prosonic	1163 1585 1667		0037 0808 0556		0208 1585 2461 1208
Newir	2474 3528	Ornwa	0371		1506 2800 0556 1887		0037 0556 1865 0880		0264		1667 0292 0011 0009
New Tech	0037 0009 0556 0343	Ornyx	1709 1770		0037 0639 1744 2015		0371 0668 0714 2001		0292 0264 0037 0556		0037 0556 0486 0170
Nikai	1163	Opera	0037 1308 0556 0714		0605 0343 0009 0361		1372 1770 2106 1709		0486		1037 1149 1163
Nikkai	0037 0556 0264 0035		1585		2114		1163 0606 2197 2125		0037 0556		0037 0556
Nikkei	0009 1667	Optimus	0650		1308 0714 1652	Protech	0037 0556 0009 0264		0698 0264 0706		0548 2241 0714 0361
Nikko	0714 2197 1585 1667	Optonica	0093		0037 0556 0486	Phocus	0668 0486 1037		1037 0715 0009 0037		2197 0606 0486 1372
Nikko	0178	Orava	1037 1149 1163		0037 0556	Phoenix	0178		1916		1163 1585 1149 3175
Nirmaus	0891	Orbit	0037 0556		0556 0037 0712 0706	Phonola	1645		0037 0556		1363 1667 2125 1308
Nogamatic	0109	Orion	2005 2032 2108 2007		1709	Pilot	2001		0037 0556		1137 0037 0556 1585
Nokia	0361 0480 0548 0473		0443 0714 0037 0556		1457 0011 1250 0170	Pioneer	0037 0556		0037 0556 2037 2001		3528 0343 0371 0361
	0208 0606 0610 0109		0011 0009 0264 1916		0679 0760 0037 0343		0009		0264 0698 0712 0009		0668 1037 0648 0714
	0891 1413 0560 0109		0880 2001 1037 0808		0361 0109 0287 0486		0753 0556 0037 1149		0706 0587 0037 0556		0624 1916 1372
	0287 2001 0343 0195	Orline	0037 0556		0512		1163 1667		0606		1037
	0037 0556 0335 1248	Ormond	0668 1037 0037 0556		0486		1606		0335		0178 1523 1983
	0714 0443 2007 1585	Osaki	0264 0037 0556		0037 0556 0264 0009	Quatrek	0650 0865 0009		0556 0037		0634
	1667 1163 1308 1882	Osio	0037 0556		0714 0037 0715 1652	Quasar					0556 1037 0037
	0625 1149	Osme	0037 0556								
Normerel	0037 0556	OTC	1645 1983								
Noritek	0668										

Programming your remote

Resetting your remote

To reset all the programmed data on the remote control and start again from scratch;

1.  Press and hold the red & blue keys for 3 seconds. The red LED will light up twice.
2.  Press **9 8 0**. The LED should blink twice, meaning the remote control has been reset.

Troubleshooting

Device does not respond to code entered

- Check you are using codes which correspond to your brand.
Try another code and make sure you enter it within 10 seconds of initiating the programming mode (pressing and holding red & blue for 3 seconds)

- The distance between remote and TV is not optimal.
Try getting closer or further away from the device and start the search again.

Device does not switch off during Auto or Manual programming

- The batteries in the remote control are weak.
Replace the batteries.

- Take out the batteries, press all the buttons several times to discharge the remote control and re-insert the batteries.
Try programming again.

- Your device may not be compatible with the remote control.

The device switches off during programming, but functions do not work after testing

- You may have missed the code. If you do not stop the auto search in time when your device switches off, start the process again to re-programme, and release the Power key as soon as the device switches off.

- Try using the Code Set up to find the correct code

AUSTRALIAN HELPLINE
- 1 300 888 298

NEW ZEALAND HELPLINE
- 0800 14 255 69

Vistron	1363	Yoko	0037 0556 0264 0009
Visual Innovations	2106	YU-MA-TU	0037
Vivax	1308 1702 0037 1709	Yusmart	1613
Vivid	3611	Zenith	0624
Vivo	2032	Zepto	1585
Vortec	0037 0556		
Voxson	0037 0556 0178 2197		
Walker	1667 1149 1163 0037		
	1037 1585		
Waltham	0287 0037 0556 0668		
	0109 1037 0443 2007		
Watson	1037 1248 0556 0037		
	0009 0668		
Watt Radio	0486		
Wega	0037 0556		
Wegavox	0009 0037 0556 1149		
	1667		
Weitech	0714 1652		
Weltblick	0037 0556		
Weltstar	1037		
Weston	0037 0556		
Westwood	1585		
Wharfedale	1983 1613 1667 1372		
	0891 0698 0706 0037		
	1037 1681 0714 0556		
	1556		
White Westinghouse	0037 0556 0624		
Wilson	0556		
Windsor	0668 1037		
Windy Sam	0556		
Wintel	0714		
World-of-Vision	0880 0865 1298 1606		
XDome	0508		
Xenius	0624 1667 1585		
Xiron	1983 1037		
XLogic	0698 0706		
Xomax	1770		
Xoro	1372		
Xypton	0037 0556		
Yakumo	1613		
Yamaha	0650 1576		
Yamishi	0037 0556		
Yokan	0037 0556		

Brand code list

Table of brand codes including columns for Brand, Code, and Phone Number. Brands listed include Hanseatic, Hamatex, Hansor, Harwood, Hauppauge, HB, HGM, Headzon, Hema, Hitcon, Hitfox, Highlight, Hikona, Hihari, Hixawa, Hixense, Hitachi, Hifisu, Hioer, Home Electronics, Homophon, Hugobson, Humax, Hyper, Hypersonic, Hypson, Hyundai, Iberia, ICE, Ict, Ideal, Ilsonic, i-Joy, Imperial, Indiana, Ingelen, Ingersoll, Ingo Devices, Inno Hit, Innovation, Innovwert, Inspira, Interactive, Interbuy, Interfunk, Internal, Intervision, Irradio, Ibis, Isukai, ITS, ITT, Hitachi Fujian, Hifisu, Hioer, Home Electronics, Homophon, Hugobson, Humax, Hyper, Hypersonic, Hypson.

Brand code list

Table of brand codes including columns for Brand, Code, and Phone Number. Brands listed include SEG, Sei-Sinudyne, Seitech, Selekline, Seleco, Sencor, Sencora, Sense, Sentra, Senie Dorada, Serrno, Sharp, Shinelco, Shintoshi, Shiwaki, Show, Siemens, Siera, Silva, Silva Schneider, Silver, SilverCrest, Singer, Sinotec, Sinudyne, Sky Media, Skysonic, Slicing, SLX, Sodium, Soemtron, Solavox, Sonic, Sonilco, Soniq, Sonitron, Sonmedair, Sonoko, Sonolor, Sonotec, Sorntech, Sony, Sound & Vision, Soundesign, Soundwave, SOVOS, Soyo, Spectra, Sangyong, Stalsonic, Standard, Starton, Starlite, Stern, Stevion, Strato, Strong, Sungoo, Sunic Line, Sunkai, Sunny, Sunstar, Suntech, Sunwood, Supersonic.