


FEATURES

1. Led Light
2. Oscillating Control Knob
3. Charging Indicator
4. Fan High / Low Speed Selector
5. LED Night Light Switch
6. Micro-usb Socket
7. Fan Cover Speed Adjust Knob
8. Fan Cover
9. Handle
10. Battery Door Release Screw
11. Battery Door
12. USB Charging Cable
13. Battery Compartment

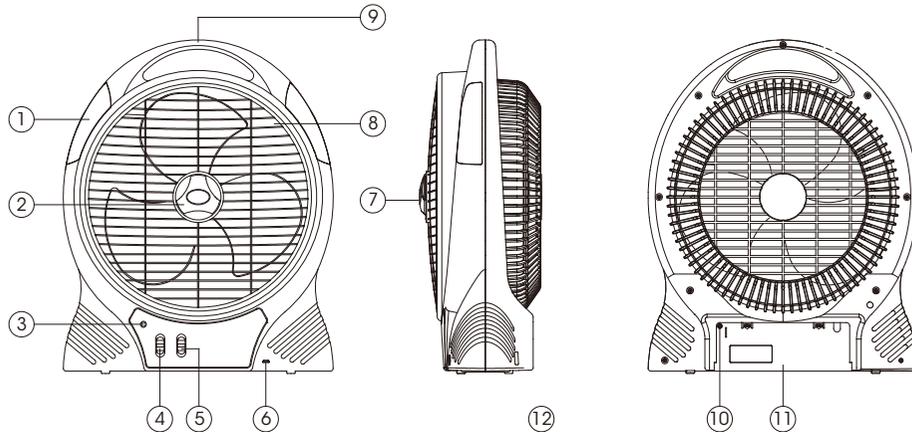


This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO PREVENT ELECTRICAL SHOCK OF FIRE HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE OR REMOVE BACK COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

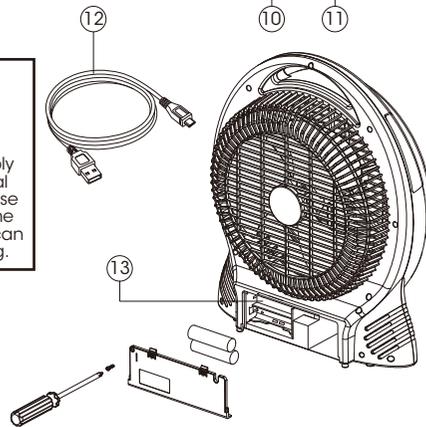

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated, "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Distributed by: Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere, NSW 2116 Australia
www.electusdistribution.com.au Made in China

KATABAT

Rechargeable 10" Electric Fan with LED Lights GH1282 User Manual



SPECIAL DEVICE WITH BATTERY DISCHARGE PROTECTION

WARNING: REPLACEABLE AND RECHARGEABLE LITHIUM-ION BATTERIES, PLEASE KEEP ALWAYS RECHARGE THE BATTERY WHEN FAN AND LIGHT POWER LOW.

CAUTION: PLEASE PICK-UP THE TAPE ON THE LITHIUM-ION RECHARGEABLE BATTERIES CONTACT PLATE BEFORE FIRST USE. ENSURE THAT THE FAN IS SWITCHED OFF FROM THE SUPPLY MAINS BEFORE REMOVING THE GUARD.



IMPORTANT NOTES

Please read the instruction manual carefully before operating this unit.

1. Remove the isolation tape of the battery in battery compartment before in use for the first time.
2. Make sure that the home power supply consistent with the product before plug in.
3. Switch off and disconnect from the power outlet when not in use or before cleaning.
4. Unplug from power source when not in use unless recharging.
5. Do not expose to rain and keep out of reach of water for proper use..
6. Do not put the fingers or any objects inside the fan grill during operation.
7. Do not operate the unit if there is any damage to the power plug or cord - take unit to an authorized service agent for replacement; do not attempt to undertake any required repairs yourself.
8. Wipe clean with damp cloth only - do not use any abrasive cleaners.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless then have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Please recharge the unit when Fan and Light goes dim or power is low.
11. Switch off all the functions when you are charging the battery. Otherwise you will get low efficiency of charging.
12. The efficiency may decrease:
 - a) When the battery is used to the end without recharge.
 - b) When the battery is recharged at temperature below 32°F (0°C) or above 104°F (40°C) .
13. Please charge the battery 8 hours after every three months in case the unit will not be used. In absence of charging, the battery will malfunction and will be damaged.

MODE OF OPERATION

* Remove the battery isolation tape in battery compartment before in use for the first time.

HOW TO RECHARGE THE BATTERY


NOTE: Before recharging, please make sure all the switches must be in "OFF" position.

1. Plug the Micro-USB Charging Cable (Feature No. 12) into the unit (Feature No.6), then plug the other side into Charging connection. the unit charging indicator (Feature No. 3) will be light up in under charging of the lithium-ion battery.
2. The time required to fully recharge the batteries is approximately 8 hours.
3. The unit battery charged in fully when the LED indicator (Feature No. 3) will be from "red" change to "green" for fully charged.

FAN OPERATION

(ON-OFF, Speed control) (Drawing 1)


Turn the fan speed control button (Feature no.4) to Low, High or OFF to select fan speed.

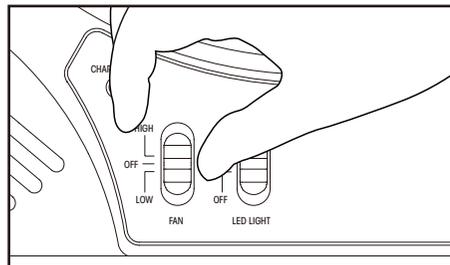

Drawing 1

LED LIGHT (Drawing 2)


Press the LED Light Button (Feature No. 5) repeatedly and the LED Light Night will be on and off.

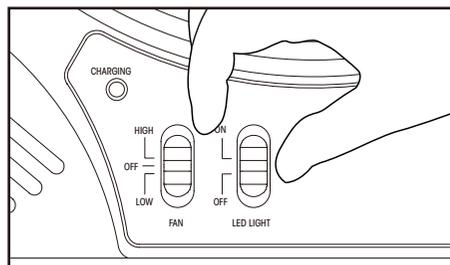

Drawing 2

FAN OPERATION (Oscillation Control)


To operate the oscillation function, turn the oscillating control knob (Feature No. 2) to adjust the required oscillation speed. (Drawing 3)

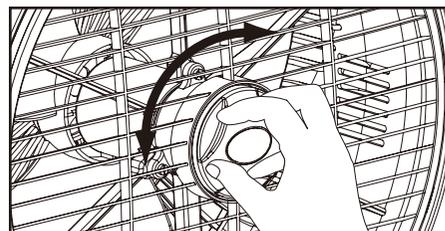

Drawing 3

HOW TO REPLACE THE LITHIUM-ION RECHARGEABLE BATTERY (Drawing 4)

1. Release the battery cover screw (Features No.10) at the bottom of rechargeable fan.
2. Open the battery door (Features No.11) then replace with new battery and reassemble in reverse procedures.
3. Ensure battery is placed correctly on battery compartment (Feature No.13) according to polarity battery contact (+) and (-).

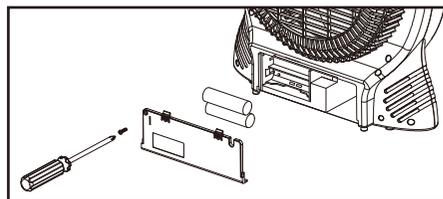

Drawing 4

WARNING FOR THE LITHIUM-ION RECHARGEABLE BATTERY.

1. This rechargeable mist fan is only applicable for charging the lithium-ion battery. Do not charge with different types or non-rechargeable batteries.
2. During using or recharging the lithium-ion battery, the appliance must be placed in a well ventilated area.
3. The orientation of the lithium-ion battery with regard to polarity battery contact (+) & (-). Do not short circuit or put fire, avoid reverse charging.
4. Regarding safe disposal of used lithium-ion batteries, insert the batteries into battery charger according to the polymer lithium-ion battery polarity.
5. Leaking lithium-ion battery must be removed from the appliance carefully. The lithium-ion

battery must be recycled or disposed of properly.

6. The lithium-ion battery must be removed from the appliance before it is scrapped.
7. The lithium-ion battery is to be disposed of safely by putting into battery compartment with cover.
8. The appliance must be disconnected from power supply before removing the battery.

MAINTENANCE

Use a small cotton swab with cleaning alcohol to clean the plastics. Never use strong or volatile chemicals.

TECHNICAL SPECIFICATIONS

Input Voltage DC5V
Input Power 10W
Operating Temperature 0°C-40°C
Humidity..... lower than 90%
Fan Motor DC3.7V
Super Bright LED Spec:
SMD 3528 0.064W (white) 10pcs
Charging Time Approx 6Hrs

Rechargeable Battery Spec:
18650 Lithium-ion Batteries 3000mA x 2 pcs.

Duration Time:
High Speed Approx 3Hrs
Low Speed Approx 5Hrs
LED Light Approx. 40Hrs

Accessory Provided:
Micro USB Charging Cable

WARNING

- A. Unplug the appliance during filling and cleaning.
- B. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- C. To avoid an electrical shock, please do not open the rear cabinet (rechargeable fan) for repair or cleaning unless qualified person.
- D. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- E. Children should be supervised to ensure that they do not play with the appliance.