


# Laser Tag Battle Guns


## Instruction Manual GT-4074

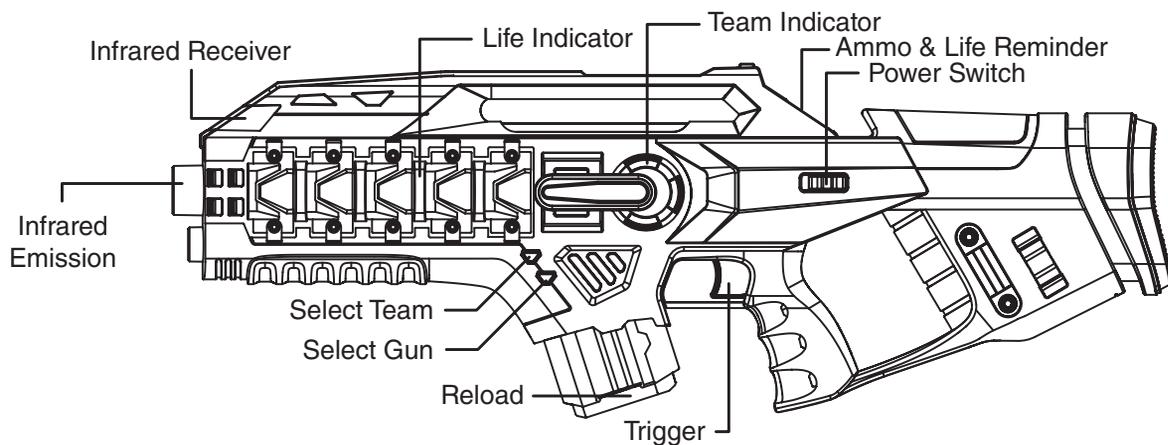


Life indicators: each life bar represents 3 health points (For a total of 8)

Low battery: the 3 life inowly to indicate that the blaster has low battery.


### Battery Installation

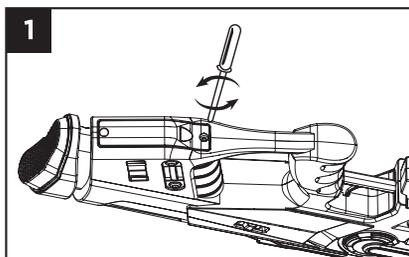

1 Use a screwdriver to remove the battery cover.

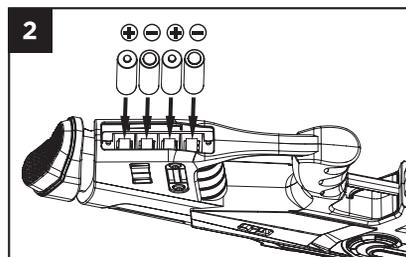


2 Insert 4 x AA batteries. Make sure the batteries are inserted with the correct polarity.

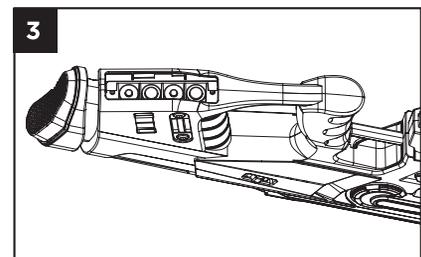


3 Replace the battery cover.

### Activating Deblocking


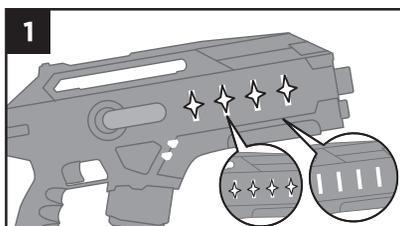


1 The 4 lights flicker.

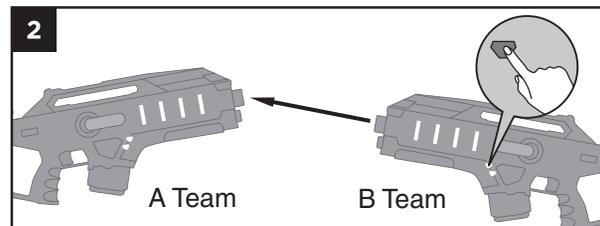

2 Press the button for 3 seconds.

Only different teams can activate each other. The muzzles must be aligned with each other when activating.

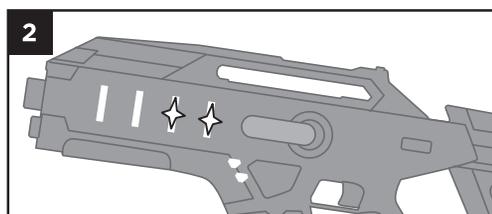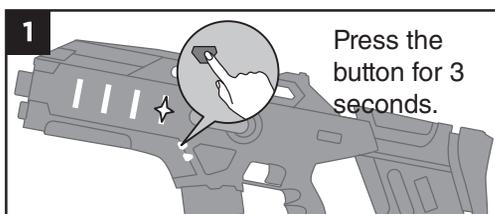

You can add 3 times of health points.

### Adding Health Points

Activating hidden lives: When you have 1 health point left, the gun will emit a warning sound. Press and hold the team selection button for 3 seconds to add a life bar. You can add up to 3 life bars. Be aware that if you point at an enemy gun while activating hidden lives, the enemy will gain health.

Cheating prevention: Players are encouraged not to change teams after a battle begins. However, if you need to change teams, there are two ways to do it:

- Another team aims at your gun and holds the team selection button for 3 seconds. This allows you to select a different team.
- Leave the gun on standby for 15 minutes, which will reset the gun and allow you to select a different team.

## Warnings Regarding Batteries

- Do not mix alkaline standard and rechargeable batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device, etc.)
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.

## Troubleshooting

Problem	Reason	Solution
Blasters do not work	Low Battery	Replace the Batteries
	Infrared signal could not reach the blaster because the distance is too far or angle is wrong	Reduce the firing distance and firing angle
	Obstacles blocking the infrared signal	Remove the obstacles
Blasters Operate Automatically	Low Battery	Replace the batteries
	Overexposure to direct sunlight	Block sunlight or play in an area without direct sunlight
	Competing infrared transmission from other devices, such as TV remotes	Stop using or move away from competing infrared devices

**NOTE:** If normal operation of the product is disturbed or interrupted, strong electro-magnetic interference may be causing a problem. Reset the product by turning it completely off and then back on. If normal operation does not resume, try replacing the batteries and moving the product to another location.

## Operating Instructions

1. Switch on the power. After initial startup, the blaster will default to blue team and single shot mode.
2. Press the gun selection button to toggle between 4 gun modes.

Gun Modes	Single Shot	Laser Guns	Machine Gun	Plasma Gun
Shots				
Health Reduced by Each Shot				

3. Press the team selection button to toggle between teams. There are 4 colours to represent a Possibility of 4 teams: Blue, Red, Yellow or White.
4. The blaster functions as both a gun and an infrared receiver, so simply aim and shoot at an opponent's blaster to register a hit. Once hit, the life indicator will reduce accordingly, and the blaster will vibrate and emit a sound. When your life indicator reaches 0, the indicators will flash and you will not be able to shoot anymore.

## Maintenance & Repair

- If you are not using this product for a long time, remove the batteries (Applicable to the remote control)
- Clean product with a damp cloth
- Avoid exposing the toy to the sun or heat
- Do not immerse the toy in water as it will damage the electronic components.