


Spin Ball

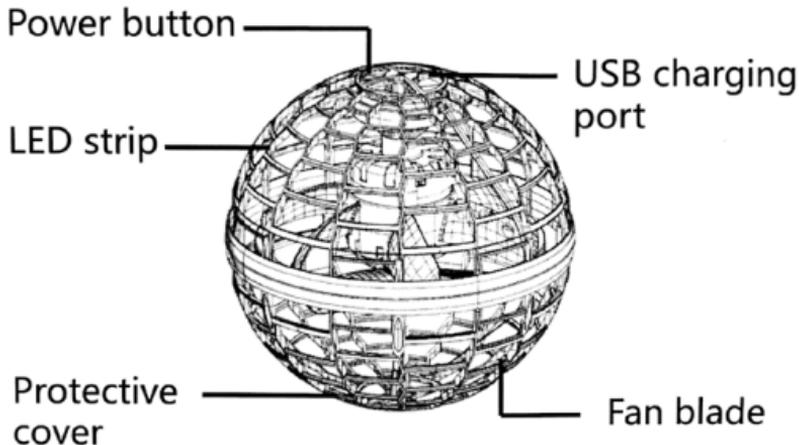

USER MANUAL

Distributed by:
Electus Distribution Pty.Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.electusdistribution.com.au

Using Modes

Turn on/turn off

Press the power button on the top of the Spin Ball with your finger. The LED light bar will flash in different colors. Swing the Spin Ball with your wrist, and the wind blade will start to rotate. Swing Spin Ball again, the wind blade will stop rotating. Press the power button again, the Spin Ball will stop working.

Boomerang

Hold the Spin Ball (horizontal and vertical to the ground) with one hand, tilt it upwards 15° to 45° and throw it out. The Spin Ball will fly back in the original direction.

Hold the Spin Ball (horizontal and vertical ground) with one hand and tilt it 15° to 45° to the upper left or upper right.

The Spin Ball will fly out in an offset direction, and then fly back to another target position in the offset direction.

Tips: When throwing the Spin Ball, the greater the tilt angle.

The faster the flight speed. It is recommended to perform small-angle tossing exercises first, and then gradually perform larger-angle tossing exercises as the training time increases.

Fly to the target

Hold the Spin Ball with one hand (horizontal and vertical to the ground), tilt it 15° to 65° downward toward the target, release the rotation Spin Ball, and the Spin Ball will fly towards the target. Hold Spin Ball with one hand (horizontal and vertical to the ground) and tilt 15° to 65° to the left front or right front. Spin Ball will fly out of the left front or right front offset, and fly back to another target position along the offset direction.

Product Parameter

Product name	Spin Ball
Battery type	Lithium ion polymer battery
Main material	PP plastics
Charging time	About 30 minutes
Battery life	6 - 7 minutes
Suitable for age	Over 8 years old
Product Weight	27 g
Product Size	9.5 x 9.5 x 9.5 cm

Precautions

1. This product contains a non replaceable battery. Please to not disassemble it or let the battery get damp.
2. If the toy is heated seriously, don't charge ii. Let it cool before charging.
3. Please avoid strong impact and exposure to direct sunlight.
4. It is recommended to charge the Spin Ball with an adult.
5. Do not charge in an extremely hot or cold environment.
6. Keep away from flammable and explosive materials when charging.
7. Toys should not be used by children under 8 years old.
8. Before playing Spin Ball, please fully charge and keep the top up.
9. When playing outdoors, please avoid rivers, roads, buildings, etc., and have enough safe space to walk around.
10. Don't play with Spin Ball in bad weather such as rain, snow, thunder, electricity and strong wind, so as to avoid injury or damage to the product.
11. Do not fly the Spin Ball over light bulbs, light tubes, glass and other fragile products.
12. Never charge the product unattended for a long time. Disconnect the charger after the product is fully charged.
13. To protect the battery life, please turn off the power of the Spin Ball before charging.