

1:10 SCALE

R/C BIG WHEEL ROCK CRAWLER

MANUAL

THANK YOU FOR YOUR CHOOSE OUR PRODUCT IN ORDER TO UNDERSTAND OUR PRODUCT BETTER. PLEASE READ THE FOLLOWING INSTRUCTIONS FOR USING.

NOTE

BATTERY OPERATED PRODUCT

This product is suitable for children 8 years old and above.

Please use this product under the supervision of adult.

Warning: Please do not disassemble or modify this product without authorization. Any changes may cause the product to malfunction.

Precautions for use

- The car body of the product uses 1 rechargeable battery, the volts are shown in the battery diagram of the battery compartment; the remote control uses 2 1.5V AA batteries;
- Battery removal and loading should be checked to ensure correct polarities for installing;
- Non-rechargeable battery is not rechargeable;
- Rechargeable batteries must be charged under adult supervision;
- The rechargeable battery should be removed from the toy before charging;
- Different types of batteries or old and new batteries can not be mixed;
- Only batteries that are the same or equivalent to the recommended battery can be used;
- Exhausted battery should be removed from the toy; if not used for a long time, please remove the toy battery;
- Power terminals may not be short-circuited;
- Use a screwdriver to unscrew the screws on the cover of the battery compartment, insert the batteries according to the correct polarity of the positive and negative poles, and unscrew the screws on the cover of the battery compartment with a screwdriver to remove the battery;
- Repair and maintenance: This product is composed of plastic, hardware and electronic components. It should not be placed or used in water or placed or used in a humid environment for a long time. Regularly check whether the wires, plugs, casings and other parts are defective. Stop using them when they are found to be defective.

(1)


Product configuration



How to install the battery

I. The remote control

- Open the remote control battery cover, and install AA batteries according to the positive and negative directions in the battery compartment of the remote control.

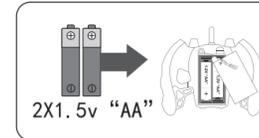


II. Remote control car

- Open the battery cover under the car, connect the rechargeable battery pack to the power socket and put it into the battery compartment under the car.
- Close the battery cover and tighten with a screwdriver.

How to charge

- Before playing please charge the new battery pack.
- First plug the battery pack plug in the charger then plug the charger in the socket.
- With the charger, the time required for the battery to be fully charged is 3-4 hours. The charging plug has a charging indicator. The red light is solid on and green light flashing when Charging, Green light is solid on and red light off when fully charged. Charging over time will not increase the power.

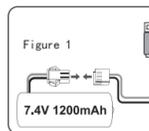

Description of automatic code matching

- After put the batteries in the controller, the indicate light flashing, and put the batteries in the car and set it on, starting to connect, if success, the controller indicate light off, otherwise repeat the above operation.
- Each remote control can only be connected to one remote control car. When the connection is successful, each car will not interfere with each other; Note: Multiple cars cannot be connected at the same time.
- The remote control did not find a signal from the remote control car when it was energized after one minute. Press any key on the freely programmable remote control to re-link the frequency.
- When you need to pair other remote controls or remote control cars of the same model, you need to turn off the power of the remote control car to re-pair.

(2)


How to play remote control car

- Turn on the remote control car switch.
- Operate the direction stick of the remote control to remotely control the car forward or backward, left or right and key functions.
- Turn off the car after playing.
- When the play is over, just turn off the switch of the remote control car, the remote control will automatically enter the sleep mode.

Instructions

Battery chargers that use this toy must be regularly checked to prevent damage to the wires and other components and, if damaged, must be repaired for damage

Remote control parts description

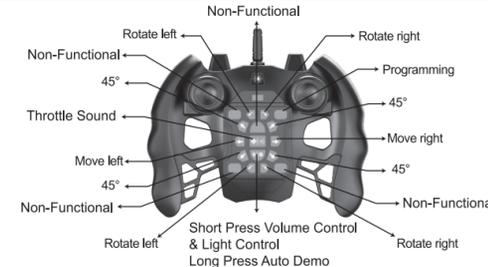

Remote control instructions

- After the batteries are in the controller the LED light will begin flashing, install the battery into the car and turn it on. It will then connect. If it does not connect turn both remote and car off before trying again.
- Press the programming button once, and the remote control car will work according to the programming.
- Press the left rotation key once and the remote control car will rotate to the left, and press the right rotation key once the remote control car will rotate and run to the right.
- 45° key press the remote control car to drive in 45° direction.
- Power on and play the chirp.

(3)

9. Play the car start sound, standby sound and display light after the frequency is up.

10. When the remote control car is moving horizontally, the car sound will be played.

General troubleshooting

| Failure symptoms | Cause of issue | Approach |
|--|---|---|
| The vehicle cannot be driven | <ol style="list-style-type: none"> The remote control is not connected or the switch of the remote control car is not turned on. Remote control or remote control car not powering on. The power of the rechargeable battery pack is insufficient. | <ol style="list-style-type: none"> Turn on the remote control car and reconnect the remote control. Put the battery into the remote control or remote control car correctly. Charge the rechargeable battery pack. |
| The vehicle is not controlled and the remote control distance is short | <ol style="list-style-type: none"> The battery or rechargeable battery pack in the remote control has insufficient power. There may be sources of interference near the site. | <ol style="list-style-type: none"> Replace the batteries in the remote control with new ones, or charge the rechargeable battery pack. Change the area for driving |
| Exception protection | <ol style="list-style-type: none"> When the function of the remote control car is hindered by external forces and cannot complete the full function, or when the circuit battery is short-circuited. | <ol style="list-style-type: none"> Turn on the power switch again to protect the remote control car from power failure. |

(4)

Operation tips

- Please make sure that the power switch is in the "ON" position. Make sure both the remote and the car are switched to "ON".
- When the battery power is consumed, the left and right steering will be non-responsive, and the forward and backward will also slow down; at this time, the battery needs to be removed and charged.
- The effective control distance of the remote control car is about 40 meters. When the distance is exceeded, the remote control car may stop or become out of control.

Maintenance

- Do not use close to the fire, avoid direct sunlight high temperature and humidity or long-term in the car, to avoid potential damage.
- When not in use, remove the batteries from the remote and the remote controlled car. For transport it is recommended to place the car and remote in the existing packaging.
- To clean the remote controlled car use a damp cloth to gently wipe the car down.

To consumers

- When playing remote control car indoors, please be careful not to damage furniture or glass.
- Please play outside in a safe place, do not use the remote control car on the road or in a crowd.
- Play remote control car to hear thunder outdoors, should immediately stop playing.
- Do not drive the remote control car towards people.
- Do not throw the remote control car.
- When storing the remote control car, please keep it away from fire and high temperature.
- The car uses a complex electronic circuits and a large number of components please do not disassemble or modify the circuit board.
- If the car becomes dirty through use please gently wipe it down with a damp cloth.
- Do not put the car or remote in the water, it will damage the electronic components.
- The packing box and manual have important information, please store it properly.

Body lighting introduction

- When the car body switch key is turned on, the car will show the body light.
- All four wheels are equipped with multicolored gradient lights, and the lights are brightest when operating at night. When the 360° drifts, the lights of the body wheels will form a gradual circle of light.

(5)

Tips

When the car moves, please do not touch the wheels of the remote control car, so as to avoid injury.



Do not play on the curb or in dangerous places to prevent accidents.

Do not play remote control car in mud or puddles.

(6)

Distributed by:
 Electus Distribution Pty Ltd
 46 Eastern Creek Dr,
 Eastern Creek NSW 2766 Australia
 Ph 1300 738 555
 Int'l +61 2 8832 3200
 Fax 1300 738 500

www.electusdistribution.com.au