

Spare 4 Channel Key Fob Controller LR8858 - User Guide

Pair for use with LR8857:

- Press the "Learn" button on the LR8857 PCB, then press number 1 on the remote control 3 times.
- Press any button on the remote control again, the LED near the "Learn" button should light up when pressed, this confirms the pairing process was successful.

Distributed By:
Techbrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere, NSW 2116, Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com