



**Bluetooth® Speaker Lantern
with Carry Handle
XC-5635
User Manual**

INTRODUCTION

For correct operation of product, please read this manual carefully before using.

FEATURES

- RGB LED Light
- Rechargeable
- Bluetooth®, AUX-in, FM radio
- Carry Handle


BOX CONTENTS

1 x Bluetooth® Speaker Lantern with Carry Handle
1 x Charging Cable
1 x 3.5mm Audio Cable

SPECIFICATIONS

Subwoofer Size:	3 inch
Subwoofer Output:	10W, 4Ω
Tweeter Size:	1.4 inch
Tweeter Output:	1.5W, 4Ω
Frequency Response:	100Hz - 20kHz
Battery:	1,800mAh Lithium
Power:	5VDC, 1A
Play Time:	2 Hours (@ Max. Volume)
Charging Time:	3-5 Hours
Weight:	770g
Dimensions:	270(H) x 115(Dia.)mm

FLYOUT

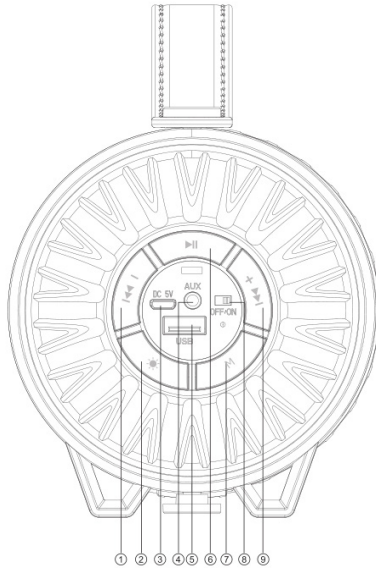

1. Previous Track / Volume Down
2. Led Light
3. Charging Socket
4. AUX Input
5. USB Port
6. Play/Pause
7. Mode (Bluetooth®, USB, FM, and AUX-IN)
8. Off / On
9. Next Track / Volume Up

BLUETOOTH®

1. Turn the power button to “On”, the LED light will turn blue and twinkle quickly, and beep twice.
2. Activate Bluetooth® of the media device and search for speaker name “XC-5635”, then connect to it. The blue LED light will twinkle slowly and beep three times once connected is successful.
3. Play the music from your media device.
4. Short press Previous or Next button on the speaker or on media device to select songs.
5. Press Play/Pause button on the speaker or on media device to play/stop the music.
6. Long press Previous or Next button to adjust volume up and down. Or adjust the media devices volume.

PLAYING MUSIC FROM USB

1. Turn the power button to “On”.
2. Insert USB flash disk into slot, the music stored will be played automatically and blue LED light will continuously be on.
3. Under playing mode, short press Previous or Next button to select songs, long press to adjust the volume.
4. Press Play/Pause to play or pause.
5. Please turn the Power button to “Off” when not using.

Please Note: Under Bluetooth® playing mode, inserting a USB device will disconnect the Bluetooth® and switch the playing to USB. You can press the “Mode” button to switch to Bluetooth® mode again.

RGB LIGHT

1. Turn the Power button to “On”.
2. Long press “LED Light” button for 5 seconds to display 7 colours bright pulsating light.
3. To change it to white light, short press “LED light” button.
4. Short press this button one more time for brighter white light.
5. To restart 7 colour bright pulsating light, short press the button again. Always short press button to change light display.
6. Long press “LED Light” button to turn off the light.

FM RADIO

1. In FM radio mode, the audio cable provided works as an antenna. Please insert the audio cable to get the best FM signal before using.
2. Turn the power button to “On”, press the “Mode” button to switch to FM radio mode.
3. Under playing mode, short press “Play/pause” button to auto search the FM Channel and store it automatically.
4. Press Previous or Next button to change the stored FM channel.

FM RADIO

For other compatible music devices or your MP3/MP4 player, use the supplied audio line cable to connect from the devices “Line Out” to the “Aux-In” of the speaker. Then press the “Mode” button to switch to AUX-IN mode. When using an external device, all functions will be controlled by the external device.

NOTES

1. Press the “Mode” button to switch the different modes, the order is Bluetooth®, USB Input, FM radio and AUX-IN.
2. Turn the power button to “Off” to cut off the power supply while not using.

CHARGING

1. The charger is not included in the accessories. Please use a universal 5V/1A charger to charge this speaker. Put the provided charge cable into the charging jack, connect the other end to the charger, the charging indicator beside the LED screen will keep lighting.
(When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not afford the high current temporarily while under the maximum volume)
2. Charge time should be 3-5 hours. When charging is full, the indicator light will switch off.
3. To prolong the life of battery, **do not charge continuously for more than 8 hours.**

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500

www.techbrands.com

Made in China