

# **Wireless Weather Station with Solar Transmitter**

## **Instruction Manual**

### **Table of Contents**

---

	<b>Page</b>
1. Introduction.....	2
2. Inventory of contents.....	2
Feature of the base station.....	2
Feature of wind sensor.....	2
Feature of rain sensor.....	2
3. Set up guide.....	3
3.1 Battery install.....	3
3.2 Mounting.....	4
4. LCD overview.....	5
4.1 LCD overview.....	5
4.2 Weather forecasting.....	6
4.3 Weather forecast tendency indicator.....	7
4.4 Storm warning indicator.....	7
5. Program modes.....	7
5.1 Quick display mode.....	7
5.2 Setting mode.....	8
5.3 History mode.....	8
5.4 Alarm mode.....	8
5.5 Min/Max mode.....	9
6. Problems and interference with operation.....	10
7. Specification.....	10

This Operation Manual is part of this product and should be kept in a safe place for future reference. It contains important notes on setup and operation.

## 1. Introduction

Thank you for purchasing this Professional Weather Center Designed for everyday use, the weather station will prove to be an asset of great value for your personal use in the home or office. Please read this instruction manual thoroughly to fully understand the correct operation of your weather station and benefit from its unique features.

## 2. Inventory of contents

- 1) Base station
- 2) WH1 sensor including thermo-hygro sensor, rain sensor, wind sensor
- 3) Instruction manual
- 4) 2 adjustable hoops (to fix the mast to your desired location)

The received data is continuously updated to bring you the latest weather information on the base station's LCD. The outdoor thermo-hygro sensors is the main data communication unit since both the wind and rain sensors are connected the thermo-hygro sensor for operating power and rely on it to communicate to the base station. Weather data sent from the thermo-hygro sensor can be done by wireless transmission.

### Additional equipment

1. 2 x AA 1.5V Rechargeable batteries.  
(included)
2. 3 x AA 1.5V batteries.  
(not included)

### Feature of the base station:

- Indoor and outdoor temperature display in degrees Fahrenheit or Celsius (user selectable)
- Indoor and outdoor relative humidity displays
- Barometric pressure reading in inHg or hPa, absolute or relative (user selectable)
- Detailed display of rainfall data in 1 hour, 24 hours, one week, one month and total since last reset. (user selectable in mm or inch)
- Wind speed in mph, km/h, m/s, knots or Beaufort (user selectable)
- Wind chill temperature display
- Dew point temperature display
- Weather forecast display by weather icons (sunny, cloudy, rainy)
- Weather forecast tendency arrow
- Storm warning alarm
- Display of extensive weather data, in all cases with programmable alarm functions for certain weather conditions as well as records of all minimum and maximum values along with time and date of their recordings
- Super bright LED back light
- Time and date with manual setting
- 12 or 24 hour time display
- Perpetual calendar
- Time zone setting
- Wall hanging or free standing
- Synchronized instant reception

### Features of wind sensor

The wind sensor measures wind speed and sends the data to thermo-hygro sensor, which in turn transmits the data to the base station.


### Feature of rain sensor

The rain sensor measures the rainfall and sends the data to thermo-hygro sensor, which in turn transmits the data to the base station. Operating power is taken from the thermo-hygro sensor by a cable connection

### 3. Set up Guide

#### 3.1 Battery install

Setting up using batteries:

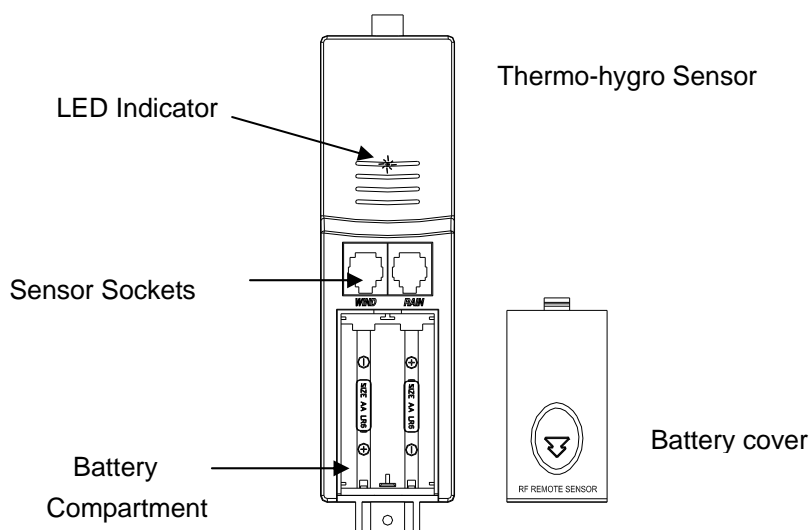

**Note: To avoid operating problems, please take note of battery polarity before/when inserting any Alkaline Batteries (permanent damaged could be introduced by inserting the battery in wrong direction). Use good quality Alkaline Batteries.**

- 1) Pull away the shower proof casing of the thermo-hygro sensor to reveal the two sockets (for the wind sensor and rain sensor)
- 2) Connect the attached cables of wind and rain sensors to the corresponding sockets of the thermo-hygro sensor by clicking them into place. Make sure that rain and wind sockets not swapped when plugging the phone jacket.
- 3) Open the battery cover of the thermo-hygro sensor located below the two sockets and insert 2 x AA, 1.5V rechargeable batteries (included) and close the cover
- 4) Open the base station's battery cover located at the back of the unit and insert 3 x AA, 1.5V batteries (not included) into the battery compartment and close the battery cover

Every time the thermo-hygro sensor is powered up (for example after a change of batteries), the LED indicator will light up for 4 seconds (if no LED light up or LED is on permanently, make sure the battery is inserted the correct way or a proper reset is happened). a random security code is transmitted and this code must be synchronized with the base station to receive weather data.

When the base station is powered up, a short beep will sound and all LCD segments will light up for about 3 seconds before it enters into learning mode to learn the sensors security code.

**Note: DO NOT PRESS ANY KEY BEFORE INDOOR STATION DISPLAY THE DATA FROM REMOTE SENSOR.** After both indoor and outdoor data are displayed you can place your remote sensor outdoors and set your time. If there is no temperature reading in the indoor station, make sure the units are within range of each other or repeat the battery installation procedure. If a key is pressed before the weather station receives the temperature signal, you will need to follow the battery installation procedure again. **Please wait minimum 10seconds before re-insert the battery again to make a proper reset for both transmitter**

**and receiver.**

**Note :** If a battery change on the transmitter side happened, the base station will resynchronized to the transmitter within the next 3 hours. If you want to shorten the receiving data time, the base station has to re-install the battery so that it can have the new security code learnt right away, but the previous weather data and alarm value in base station will be lost.

**Note:**



When batteries require replacement for the base station, the low battery indicator will light up on the LCD.

**Please participate in the preservation of the environment by properly disposing of all used-up batteries and accumulators at designated disposal points. Never dispose of batteries in a fire as this may cause explosion, risk of fire or leakage of dangerous chemicals and fumes**

**3.2 Mounting**

1) Base station


With one foldable leg at the back of the unit, the base station can be placed onto any flat surface or wall mounted at the desired location by the hanging holes also at the back of the unit. It is important to check that the radio signal can be received before permanently mounting any of the units

2) Remote sensor


For accurate results, the remote sensor mast should be securely mounted onto a horizontal surface and in an open area away from trees or other coverings where rainfall or wind speed may be reduced causing inaccurate reading

a). mounting the wind sensor onto a mast

Firstly, check that the wind-fan can rotate freely before fixing the unit. The wind sensor should now be mounted using the screw onto a mast provided to allow the wind to travel around the sensor unhindered from all directions.

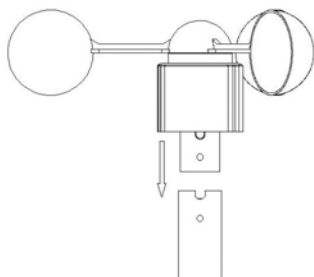


Front

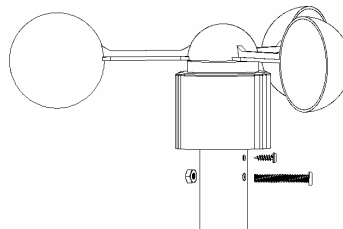


Back


b.) Mounting the rain sensor

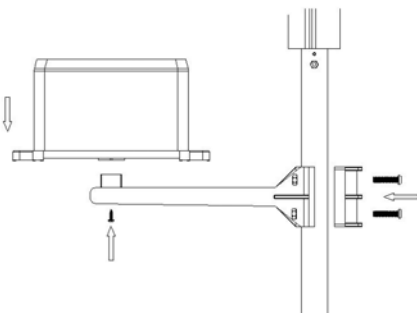


c) Thermo-hygro sensor with solar panel

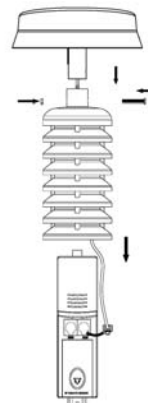


d.) Mounting the thermo-hygro sensor same as rain sensor

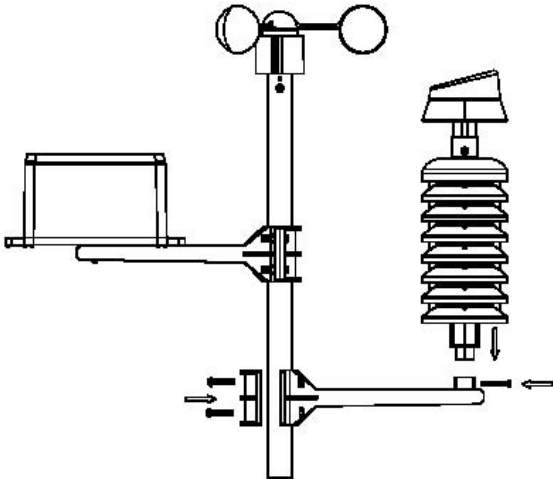

e.) Fix the whole set to a pole with the two adjustable hoops.

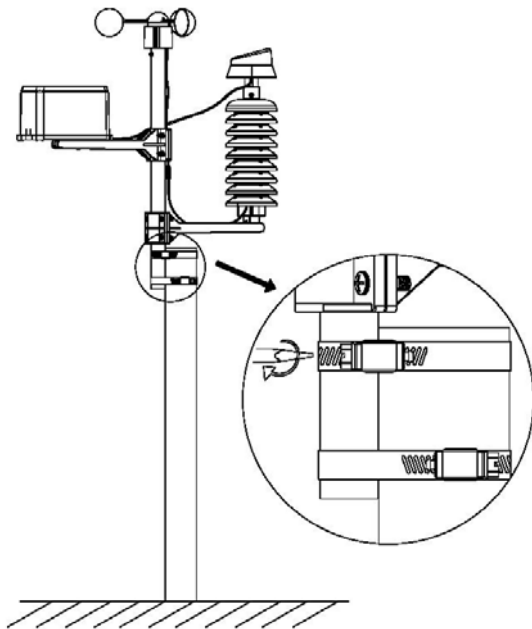

Once the wind sensor and rain sensor are fixed onto the mast, connect the cable to the corresponding thermo-hygro sensor socket.

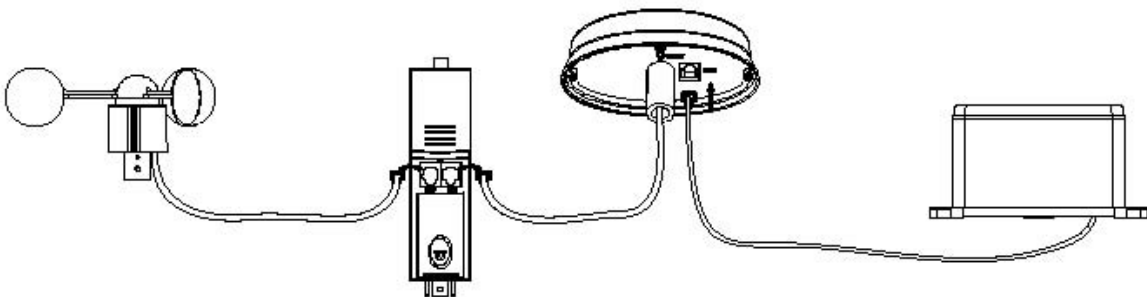

- The anemometer's cable is connected to the input marked **Wind** on the thermo-hygro sensor
- The rain sensor's cable is connected to the input marked **Rain** on the solar panel
- The solar panel's cable is connected to the input marked **Rain** on the thermo-hygro sensor.

## The solar transmitter

The solar transmitter makes use of solar energy to power the instruments they are connected to.

Note: It uses AA size lithium batteries. For the solar transmitters to function properly, make sure the solar receptors on the transmitters are exposed to sunlight and the connectors of the connection cable are securely plugged in.


For best results, direct solar panel as follows:

Solar panel facing north if you reside in the southern hemisphere; Solar panel facing south if you reside in the northern hemisphere.

## 4. LCD overview

### 4.1 LCD overview

The following illustration shows the full segments of the LCD for description purposes only and will not appear like this during normal operation and use.

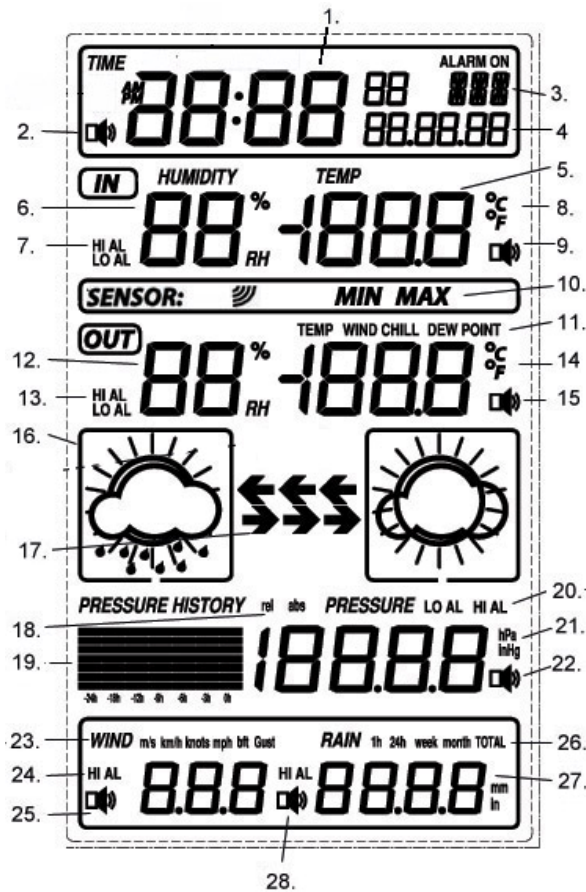


- |   |  |
|---|--|
| 1. Time   | 15. General outdoor alarm icon                                 |
| 2. Alarm on indicator                                       | 16. Weather forecast icon                                      |
| 3. Day of week/ time zone / history                         | 17. Weather tendency indicator                                 |
| 4. Date   | 18. Pressure unit (relative or absolute)                       |
| 5. Indoor temperature display                               | 19. Pressure with 24 hour history graph                        |
| 6. Indoor humidity display                                  | 20. Pressure low alarm and high alarm                          |
| 7. Indoor temperature and humidity low alarm and high alarm | 21. Pressure display unit (inHg or hPa)                        |
| 8. Temperature display unit                                 | 22. Pressure alarm on indicator                                |
| 9. General indoor alarm icon                                | 23. Wind speed display unit (m/s, km/h, knots, chill mph, bft) |
| 10. MIN/MAX information                                     | 24. Wind speed high alarm                                      |
| 11. Wind chill and dew point temperature display            | 25. Wind alarm on indicator                                    |

- 12. Outdoor temperature and humidity display
- 13. Outdoor temperature and humidity low alarm and high alarm
- 14. Temperature display unit

- 26. Rainfall display unit (mm/in)
- 27. Rainfall 1h, 24h, week, month or total hour display
- 28. Rainfall alarm on indicator

**4.2 Weather forecasting**

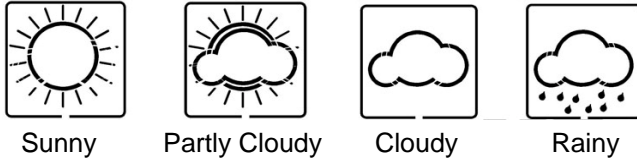


The four weather icons Sunny, partly Cloudy, Cloudy and Rainy represent the weather forecasting. For every sudden or significant change in air pressure, the weather icons will update accordingly to represent the change in weather.

**4.3 Weather forecast tendency indicator**


The weather tendency indicators arrow is located between the weather icons to show the air pressure tendency and provide a forecast of the weather to be expected by the decreasing or increasing air pressure. The rightward arrow means that the air pressure is increasing and the weather is expected to become better. The leftward arrow means that the air pressure is decreasing and the weather is expected to become worse.

The change of weather forecast icon is in accord to the relationship between current relative pressure and the pressure change since last three hours. If the weather is changing, weather tendency indicator (animated arrows) will be flashing. And then the arrows will fix while weather conditions have become stable.

**Examples of changing weather icons:**

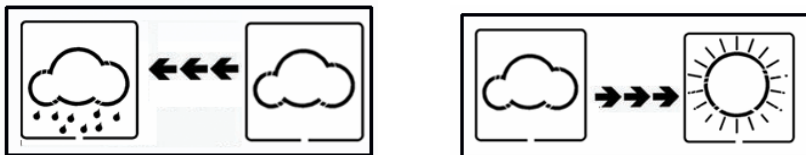

**4.4 Storm warning indicator**

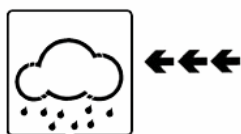

The storm threshold can be set to suit the user’s requirement for storm forecasting from 3-9hPa (default 4hPa). When there is a fall over pressure threshold in 3 hours, the storm forecasting will be activated, the clouds with rain icon and tendency arrows will flash for 3 hours indicating the storm warning feature has been activated.

**Notes to pressure sensitivity setting for weather forecasting:**

The pressure threshold can be set to suit the user’s requirement for weather forecasting from 2-4hPa (default 3hPa). For areas that experience frequent changes in air pressure requires a higher setting compared to an area where the air pressure is stagnant. For example if 4hPa is selected, then there must be a fall or rise in air pressure of at least 4hPa before the weather station will register this as a change in weather.

**5. Program Mode**

The base station has five keys for easy operation: **SET** key, **+** key, **ALARM** key, **HISTORY** key and **MIN/MAX** key. And there are five program modes available: Quick Display Mode, Setting Mode, Alarm Mode, History Mode and Min/Max Mode.

The program mode can be exited at any time by either pressing the **HISTORY** key, or waiting for the 10-second time-out to take effect.

### 5.1 Quick Display Mode

- While in Normal Mode, press the **SET** key to enter the Quick Display Mode as follow:
  1. Outdoor Temperature / Wind chill / Dew point (press the **+** key or **MIN/MAX** key shifts the display between outdoor temperature, wind chill and dew point)
  2. Absolute pressure / Relative pressure (press the **+** key or **MIN/MAX** key shifts the display between the absolute pressure and relative pressure)
  3. Wind speed / Gust speed (press the **+** key or **MIN/MAX** key shifts the display between the wind speed and gust speed)
  4. 1 hour/ 24 hour / week/ month / total rainfall quantity (press the **+** key or **MIN/MAX** key shifts the display between the selectable rainfall quantities), while display the rainfall total quantity, pressing the **ALARM** key will reset the rainfall total value to zero and the time recording to current time.
- Press the **SET** key to accept the change and advance to the next display mode. Continue to press the **SET** key to toggle through the display mode until return to the normal Mode

### 5.2 Setting Modes

- Press the **SET** key for 3 second while in normal mode to enter the normal Setting mode
- Press the **SET** key to select the following setting in sequence :
  1. Time Zone Setting
  2. 12/24 hour format
  3. Manual time setting (hours/minutes)
  4. Calendar setting(year /month /date)
  5. Temperature display unit degree Celsius or Fahrenheit
  6. Air pressure display units in hPa or inHg
  7. Relative pressure setting from 919.0hPa – 1080.0hPa (default 1013.5hPa)
  8. Pressure threshold setting (default 3)
  9. Storm threshold setting (default 5)
  10. Wind speed and gust display units in km/h, mph, m/s, knots, bft
  11. Rainfall display units in mm or inch
- In the setting modes, press **+** key or **MIN/MAX** key to select the units or scrolls the value. Holding the **+** key or **MIN/MAX** key for 3 second will increase/decrease digits in great steps.
- Press **HISTORY** key or key idle 30 second, the setting mode will return to Normal Mode

**Note:** Please set the units firstly before change units' value. During change of units setting, units' value will change according to new units but it might cause resolution loss due to its internal calculation algorithm.

### 5.3 History Modes

- While in Normal Mode, press the **HISTORY** key to enter the History Mode.
- In the History Mode, press the **+** key to select the record over the past 24hours at increments of-24 hours, -22 hours, -20 hours, -18 hours, -16 hours, -14 hours, -12 hours, -10 hours, -8 hours, -6 hours, -4 hours, -2 hours.
- Press the **HISTORY** key or key idle 10 second to return to Normal Mode

### 5.4 Alarm Modes

- While in Normal Mode press the **ALARM** key to enter the High Alarm Mode
- Press the **ALARM** key again to enter Low Alarm mode

**Remark:** after the initial pressing of **ALARM** key, the display will be refreshed to show current high, low alarm values. Normal alarm value will be displayed only for those already activated, all other not activated values will be displayed with "--"or "- -"instead.

- Press the **ALARM** key again to return the Normal Mode
- In the High Alarm Mode press the **SET** key to select the following alarm modes:
  1. Time alarm (hour/minute)
  1. Indoor humidity high alarm
  2. Indoor temperature high alarm
  3. Outdoor humidity high alarm
  4. Outdoor temperature high alarm



5. Wind chill high alarm
6. Dew point high alarm
7. Pressure high alarm
8. Wind speed high alarm
9. Gust speed high alarm
10. 1Hour rain high alarm
11. 24 hour rain high alarm


- In the Low Alarm Mode press the **SET** key to select the following alarm modes:
  1. Time alarm (hour/minute)
  2. Indoor humidity low alarm
  3. Indoor temperature low alarm
  4. Outdoor humidity low alarm
  5. Outdoor temperature low alarm
  6. Wind chill low alarm
  7. Dew point low alarm
  8. Pressure low alarm
- In the alarm modes, Press **+** key to changes or scrolls the value upward, or press **MIN/MAX** key to change or scrolls the alarm value downward. Hold the **+** key or **MIN/MAX** key for 3 second to change the number in great step. Press the **ALARM** key to choose the alarm on or off (if alarm is enabled, the speaker icon on the LCD will be turned on indicating the alarm function has been enabled). Press the **SET** key to toggle through each alarm mode until it returns to the normal display mode.
- Press **HISTORY** key or key idle 30 second at any time, the alarm mode will return to Normal Mode

### Canceling the Temperature Alarm While Sounding

- a. When a set weather alarm condition has been triggered, that particular alarm will sound for 120 second and flash until the weather condition doesn't meet the user set level. Press any key to mute the alarm.
- b. The alarm will reactivate automatically once the value has fallen below the set value, or if a new value is entered.

### The outdoor weather alarm

When a set outdoor weather alarm has been triggered, it will flash on the LCD display and the general outdoor alarm icon and high/low alarm icon will flash accordingly. For example, in outdoor temperature display mode, when dew point high alarm is triggered **DEW POINT** icon will flash along with general outdoor alarm icon and high alarm icon flashing, telling that the current alarm source is from dew point.

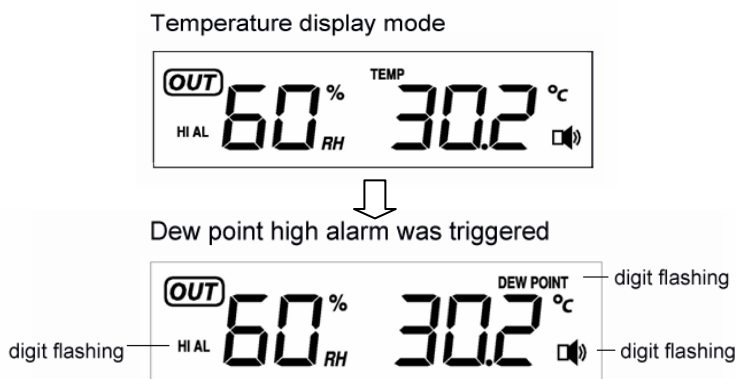

### 5.5 Min/Max Mode

- While in Normal Mode, press the **MIN/MAX** key to enter the maximum mode,
- Press **MIN/MAX** key again to enter the minimum mode
- Press **MIN/MAX** key again to return the Normal Mode
- In the maximum reading Mode, press the **+** key to display the following maximum values together with the time and date stamp when these values were recorded: (if press **SET** key in the following individual maximum value will be reset to current reading together with the current time and date.)
  1. Indoor humidity maximum

2. Indoor temperature maximum
  3. Outdoor humidity maximum
  4. Outdoor temperature maximum
  5. Wind chill temperature maximum
  6. Dew point temperature maximum
  7. Pressure maximum
  8. Wind speed maximum
  9. Gust speed maximum
- In the minimum reading Mode, press the **+** key to display the following minimum values together with the time and date at which these values were recorded: (if press **SET** key in the following individual minimum value will be reset to current reading together with the current time and date.)
    1. Indoor humidity minimum
    2. Indoor temperature minimum
    3. Outdoor humidity minimum
    4. Outdoor temperature minimum
    5. Wind chill temperature minimum
    6. Dew point temperature minimum
    7. Pressure minimum
  - Press the **HISTORY** key or key idle 10 second, the Min/Max mode will return to Normal Mode

## 6. Problems and interference with operation

Problem & cause	Remedy
Distance between transmitters and receiver too long	Reduce distance between transmitters and receiver to receive signal
High shielding materials between the units (thick walls, steel, concrete, isolating aluminum foil and etc.)	Find a different location for sensors and/or receiver. See also item 'transmission range' below
Interference from other sources (e.g. wireless radio, headset, speaker, etc. operating on the same frequency)	Find a different location for the sensors and/or base station. Neighbors using electrical devices operation on the same signal frequency can also cause interference with reception
No reception after adding extension cables	Find a new location for the sensors and/or base station.
Poor contrast LCD or no reception or low batteries in sensors or receiver	Change batteries ( check low battery indicator on the LCD)
Temperature, humidity, or air pressure is incorrect.	Check/replace batteries. If multiple remote sensors are in use, check location with corresponding "boxed numbers". Or move away from sources of heat/cold. Adjust relative air pressure to a value from a reliable source (TV radio, etc.).

## 7. Specifications

### Outdoor data

Transmission distance in open field :	100meter
Frequency :	433MHz
Temperature range :	-30°C to +65°C (show OFL if outside range)
Resolution :	0.1°C
Measuring range rel. humidity :	1%~99%
Rain volume display :	0 - 9999mm (show OFL if outside range)
Resolution :	0.1mm (if rain volume < 1000mm) 1mm (if rain volume > 1000mm)
Wind speed :	0~180km/h (show OFL if outside range)
Measuring interval thermo-hygro sensor :	48 sec

Water proof level : IPX3

**Indoor data**

Measuring interval pressure / temperature : 48 sec  
Indoor temperature measure range : 0°C to +60°C (reading range: -20°C to +65°C)  
Resolution : 0.1°C  
Measuring range rel. humidity : 1%~99%  
Resolution : 1%  
Measuring range air pressure : 300-1100hPa (8.85-32.5inHg)  
Accuracy : +/-3hpa under 700-1100hPa  
Resolution : 0.1hPa (0.01inHg)  
Alarm duration : 120 sec

**Power consumption**

**Base station** : 3XAA 1.5V batteries (not included)  
Thermo-hygro sensor : 2xAA rechargeable batteries (included)  
Battery life : Minimum 12 months for base station  
Minimum 36 months for thermo-hygro sensor

Remark: Be sure to use 1.5V rechargeable battery for solar transmitter.  
Where outdoor temperature is lower than -20°C, make sure proper type of batteries to be used to assure that the device can get enough power to maintain its function properly.



**Please help in the preservation of the environment and return used batteries to an authorized depot.**

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.

All trademarks and patents are acknowledged.